

Short cleaning instructions

Fantastic ECO

Disassembly



Ensure that no oranges remain in the supply tunnel or the pressing elements.



Ensure that the lower pressing elements are in a horizontal position.



Open the Front Cover fixation screws and take off the Front Cover. CAUTION! Wash only by hand.



Remove the Cross Holder by loosening and pulling the screw.




Take off the upper pressing elements.



Take off the peel ejectors.



Take off the **lower pressing elements**. During Assembly: Lower pressing elements must be flush with shaft.

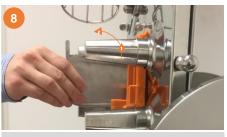

Remove the SCS knife by moving it upward and pulling it off. CAUTION! Risk of injury!



Take off the fruit supply tunnel by opening the fixation lever.



Take off the Double Cover. Clean front with clear water and wet cloth.



Remove the complete MTS-System (fruit sieve, fruit sieve holder, MTS slider)



Remove the peel bucket from the machine.



Disassemble the Self-Service Tap in the shown order.

Attention!


All machine parts, except the Front Cover, can be cleaned in the dishwasher.



We recommend cleaning the machine twice within 24 hours.

Assembling

Assemble the machine parts in reverse order. Ensure that the lower Pressing elements are horizontal and flush with the shaft and that the Cross Holder screw is fixed tightly. Failure to observe this may result in damage to the machine!

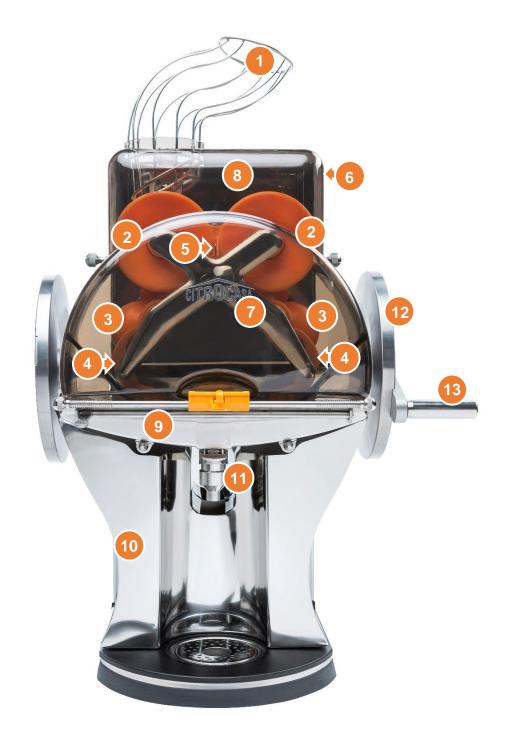

- **Supply Tunnel**
- 2 x Upper Pressing elements (r &
- 2 x Lower Pressing elements (r & I)
- 2 x Peel Ejectors (r & I)
- SCS Cutting Knife

- Double Cover
- Crossholder
- Front Cover
- Fruit Sieve Support
- Peel Bucket

- Tap
- Flywheel
- Handle