

Hurtigveiledning: Kokemodus

Dieta Genier GÅ!

1. TEMPERATUR



Mantel temperatur

102 °C	105 °C
Mild koking	Koking



Matens temperatur

(ALTERNATIV)

1...39 °C	40...92 °C	93...99 °C
Heving	Mild koking	Power Koking



Nedkjølin
(ALTERNATIV)

The screenshot shows the control panel with the following settings: Temperature set to 92°C, Time set to 00:10, Water amount set to 125 l, and Speed set to 60. There are plus and minus buttons for each setting.

2. TID

Still inn tiden som tilberedes ved måltemperaturen.

3. VANNMENGDE

Trykk på knappen for å starte/stoppe fylling på vann.

Med vannmåling (ALTERNATIV)

Trykk tallverdi-feltet for å stille inn literverdi som vannkokeren måler automatisk

4. BLANDE

- +/--knapper for å legge til/ redusere hastighet
- Trykk på tallfeltet for å åpne miksermodusvalg og detaljert hastighetskontroll.

Koking (poteter, pasta, ris)	Fremover, lang pause Hastighet 10...20
Supper	Fremover, lang pause Hastighet 10...30
Sauser, blande ingredienser	Auto-reversering Hastighet 80...120
Sauser, småkoker	Framover Hastighet 10...20
Mosing (puré)	Auto-reversering Hastighet 80...120
Kjøtt	Auto-reversering Hastighet 20...40
Puddinger, grøter	Framover Hastighet 30...40
Piskede desserter	Auto-reversering Hastighet 80...100

6. KLAR

READY-knappen avslutter programmet og åpner visningen "Program Ready".

READY



Vipp ned Åpent lokk blande



Vipp opp