

QuickGuide: Cook mode

Dieta Genier GO!

1. TEMPERATURE



Jacket temperature

102 °C	105 °C
Gentle Cook	Boiling




Food temperature
(OPTION)

1...39 °C	40...92 °C	93...99 °C
Proving	Gentle Cook	Power Cook



Chilling
(OPTION)

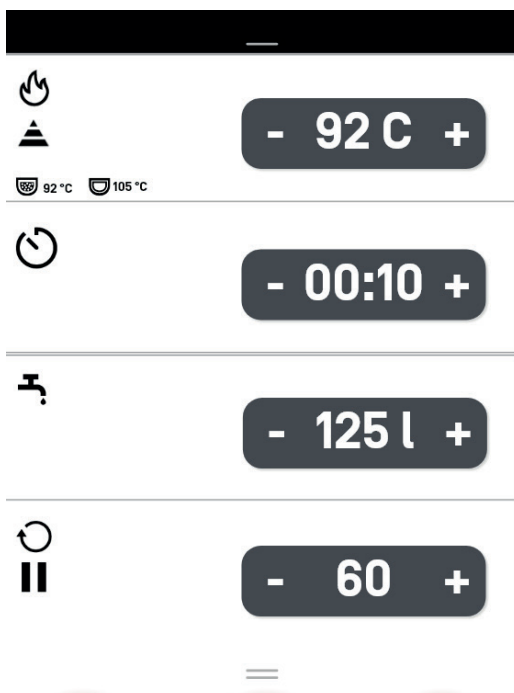

2. TIME

Set time that is cooked at the target temperature.

3. WATER AMOUNT

Press the button to start/stop add water.

With water measurement (OPTION)

Press number value -field to set liter value that the kettle automatically measures

4. MIXING

- +/- buttons to add/reduce speed
- Press the **number field** to open mixer mode selection and detailed speed control.

Boiling (potatoes, pasta, rice)	Forward, long pause Speed 10...20
Soups	Forward, long pause Speed 10...30
Sauces, mixing ingredients	Auto-Reverse Speed 80...120
Sauces, simmering	Forward Speed 10...20
Mashing (purees)	Auto-Reverse Speed 80...120
Meat	Auto-Reverse Speed 20...40
Puddings, Porridges	Forward Speed 30...40
Whipped desserts	Auto-Reverse Speed 80...100

6. READY

READY button ends the program and opens the "Program Ready" view.

