



# Quick Guide

## DIETA SOUPPER


[with water measurement and food temperature control]

### MEASURE WATER


 Keep pressing 4s, to activate water measurement.

 Select the liters to fill with +/-

### SET MIXING


 Press to select mixing mode.

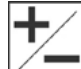
- P1) Forward only.
- P2) Auto-reverse
- P3) Quick auto-reverse.
- P4) Slow auto-reverse.
- P5) Auto-reverse, pause.
- P6) Forward, pause.
- P7) Forward, long pause.

 Select mixing speed with +/-



### START COOK

 Press Cook to start heating

 Select temperature with +/-

1...39 °C: **Proving**  
 40...92 °C: **Gentle cooking**  
 93...99 °C: **Power cooking**  
 100...125 °C: **"Light searing"**  
 (not for boiling)

Boiling (potatoes, pasta, rice)	P7 Forward, long pause Speed 10...20
Soups	P7 Forward, long pause Speed 10...30
Sauces, mixing ingredients	P2 Auto-Reverse Speed 80...120
Sauces, simmering	P1 Forward Speed 10...20
Mashing (purees)	P2 Auto-Reverse Speed 80...120
Meat	P2 Auto-Reverse Speed 20...40
Puddings, Porridges	P1 Forward Speed 30...40
Whipped desserts	P2 Auto-Reverse Speed 80...100

### SAFE-SPEED-MIX

Starts slow speed mixing when lid is open (also when kettle is tilted). Operates only while the button is pressed

### TILTING

Kettle tilts when the tilt button is pressed.

### NOTE:



Pressing "STOP" will stop all functions.

To continue cooking, you have to set all settings again.

### SET TIMED START



The indicator light starts flashing.

The time from now until the start.

**Dieta**<sup>®</sup>

DIETA SOUPPER Quick guide 2/2019 • EN

**DOD**<sup>®</sup>