

# Quick Guide

## DIETA CELER

### ADD WATER

#### START FILLING



Press to fill the kettle with water. Stop by pressing the button again.

#### MEASURE WATER



Keep pressing 4s, to activate water measurement.



Select the liters to fill with +/-

### SET MIXING




Press to select mixing mode.  
 P1) Forward only.  
 P2) Forward, pause.  
 P3) Quick auto-reverse.  
 P4) Slow auto-reverse.



Select mixing speed with +/-

Boiling (potatoes, pasta, rice)	P2 Forward, pause Speed 10...20
Soups	P2 Forward, pause Speed 10...30
Sauces, mixing ingredients	P3 Auto-Reverse Speed 80...120
Sauces, simmering	P1 Forward Speed 10...20
Mashing (purees)	P3 Auto-Reverse Speed 80...120
Meat	P3 Auto-Reverse Speed 20...40
Puddings, Porridges	P1 Forward Speed 30...40
Whipped desserts	P3 Auto-Reverse Speed 80...100

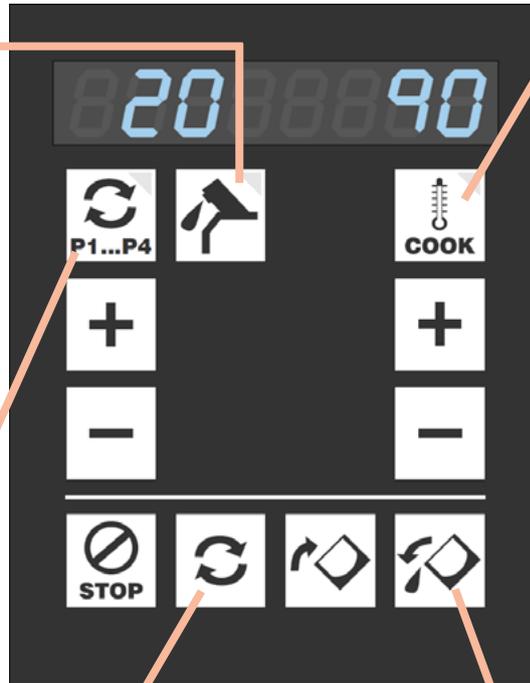

### START COOK



Press Cook to start heating



Select temperature with +/-

Temperature is for the jacket of the kettle

### SAFE-SPEED-MIX

Starts slow speed mixing when lid is open (also when kettle is tilted). Operates only while the button is pressed

### TILTING

Kettle tilts when the tilt button is pressed.

### NOTE:



Pressing "STOP" will stop all functions.

To continue cooking, you have to set all settings again.