

INSTRUCTION MANUAL FOR  
MULTIPURPOSE CONTAINER AND  
DISHWASHER

MOD. \_\_\_\_\_

**XLC**


\_\_\_\_\_

## INTRODUCTION

- 1) Read carefully all instructions supplied in this manual which contains important information for correct installation, use and maintenance. Keep in a safe place for future reference.
- 2) After opening all packing, check to ensure if all is in order. If in doubt, do not use and contact a qualified professional to check the appliance. Remove all packing materials (plastic bags, styrofoam packing, nails or staples, etc.) away from the reach of children as they can present danger.
- 3) Before connecting the appliance to the mains, ensure that your water and electrical supply correspond to the requirements.
- 4) This appliance must be installed by a qualified technician according to the manufactures instructions.
- 5) This appliance must only be used in the manner for which it is intended. Any other use is considered improper and therefore dangerous.
- 6) This appliance should only be used by persons trained to use it.
- 7) When attending to the dishes after washing, proper hygiene must be carefully observed.
- 8) Do not expose appliance to temperatures below 0°C.
- 9) The protection factor of the machine is IP X4 and should not be washed using direct jets of water at high pressure.
- 10) After turning off wall switch, only qualified personnel should remove panelling for repairs.
- 11) This appliance conforms to D.M.13/4/89 according to the CEE directive 87/308, relative to eliminating radio disturbances.
- 12) Conforms to CEE directive n. 23 of 19/2/73 and to the law n. 791 of 18/10/87, our dishwashers are built according to the best technical rules in force in ITALY and ABROAD and are covered by European certificates.
- 13) Noise level of the machine, less than 67dB(A)

**INSTRUCTIONS FOR USE**

**THE COMMANDS PANEL**

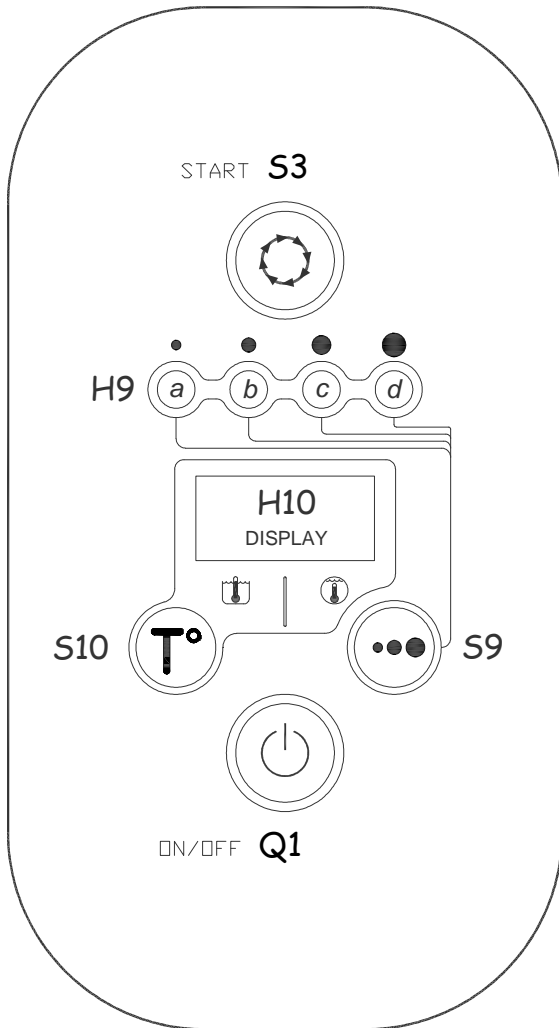

- H9 a** • - INDICATOR LAMP SHORT CYCLE
- H9 b** • - INDICATOR LAMP MEDIUM CYCLE
- H9 c** • - INDICATOR LAMP LONG CYCLE
- H9 d** • - INDICATOR LAMP INTENSIVE CYCLE (MPS)

**H10** - DISPLAY

**Q1** ON/OFF  - MAIN SWITCH

**S3** START  - START PUSH BUTTON  
\* MANUAL/AUTOMATIC SELECTOR

**S9**  - CYCLE SELECTION PUSH BUTTON  
- REGENERATION CYCLE PUSH BUTTON

**S10**  - TEMPERATURE SELECTION PUSH BUTTON

 - TANK TEMPERATURE

 - BOILER TEMPERATURE

## OPERATION AND USE


### HOW TO USE

1 Before using check that:


- it is plugged in
- the water supply is on
- there is water in the pipe
- the pump filter is correctly inserted
- the overflow pipe is connected
- the blades may move freely
- temperatures used are those which are recommended at 55°C for washing and 85°C for rinsing.
- the crockery to be washed is in good condition and not cracked, as the cracks offer more opportunity for the soiling to remain and floral bacteria to grow.

### SWITCHING ON

➤ When the machine is off, the display shows "**O.F.F.**"

2 To turn on the machine press the  "**Q1**" switch.

The indicator light of the last cycle selected turns on ("H9 a-b-c-d").

 *The "H9b" indicator light turns on the first time the machine is turned on.*

During the loading of the tank the display shows "**F. .2.**".

When the loading is completed, the boiler and tank heaters are turned on.


***When the machine is ready, the display shows the tank temperature and turns on the selected cycle indicator light.***

Put into the filter in the tank the correct amount of chlorinated industrial detergent according to the manufactures recommendation.

Using detergents which are chlorated and sanitized, they should be placed in the machine using an automatic dosage device as when the detergent is poured directly into the tank the possibility of formulation of dark spots may appear on the surfaces as a result of the clorate


Dishes should now be put into suitable positions in the racks, after the removal of solid waste. Cups and cutlery should be placed vertically in the suitable compartment. Do not overload. The dishes should not be overlapped in such a way as the water cannot reach every surface of the dish.


## WASH CYCLE SELECTION


3. Press the  "S9" button to select the wash cycle according to the dirtiness of the dishes:

- H9a **short cycle:** for glasses and cups;
- H9b **medium cycle:** for normally dirty dishes;
- H9c **long cycle:** for particularly deep or dirty dishes and for utensils;
- H9d **intensive cycle:** for pots and pans.

## STARTING THE WASH CYCLE

4. Press and hold the  "S3" button (for about 5 sec.) to set the startup mode of the chosen wash cycle:

- "H9..." indicator light **turns on (steady):**  
*automatic startup* by closing the hood.
- "H9..." indicator light **flashes:**  
*manual startup* pressing the  "S3" button.

 If the choice of startup of the cycle in *automatic* mode is performed with the hood lowered, it is necessary to lift and then close the hood to start the cycle.

### It is important to know that:

- the activation of a cycle is shown by the sequential lighting of the indicator lights of the display:
  - during the wash phase, the tank temperature flashes
  - during the dwell nothing is shown
  - during the rinse phase, the boiler temperature flashes.


## **IMPORTANT**

**N.B.: Machine in conformity with the existing hygienic standards, guaranteeing a final rinse at 82°C. Wash cycle automatically lengthened if final rinse temperature is not reached.**

**To avoid the machine blocking in this intervention, after 8 minutes the intervention is stopped and the cycle continues.**

### **INTERRUPTION AND END OF WASH CYCLE**

**5** It is possible to momentarily interrupt the wash cycle by raising the hood; the operations will resume by lowering it.

Turning off the machine using the  "Q1" switch terminates all active cycles.


Upon turning on the machine again, the indicator light of the last cycle selected will light and the display will show the alarm code "**A. .1.**" until a new cycle starts.

At the end of the cycle, remove the rack at an incline and shake carefully to remove any remaining drops or residue.

Leave dishes to dry and take out rack with clean hands, paying attention to not touch internal parts and borders. Remove dishes and place in a hygienic location.

### **SELF CLEANING AND DRAIN CYCLE**

**6** At the end of the wash operations *turn off the machine* by pressing the  "Q1" switch.

After having removed the overflow pipe and lowered the hood, press the  "S3" button *for 3 sec.*

The self cleaning and drain cycle will start, turning on the drain pump for machines equipped with it.

- The display will show "**C. .1.**" during the entire cycle (2 min. and 30 sec.).

At the end of the autowash cycle, remove the tank filter to clean and replace along with the overflow hose in the correct position. For further information regarding the accessories please look under the section "USEFUL INFORMATION".


## MANUAL DRAIN

7 It is possible to empty the tank at any time of the day.

With the machine off, take out the overflow pipe from the tank and wait until it is completely empty.

**For machines equipped with drain pump** it is possible to empty the tank by starting the manual drain cycle during which only the drain pump is active.


**⚠ It is possible to perform this cycle only with the machine turned on.**




After having taken out the overflow pipe, press the  "S9" button for 5 sec. The drain cycle will start.





- The display will show "C. .2." for the entire duration of the cycle (2 min. and 20 sec.).

At the end of the cycle it is recommended to remove the filters of the tank for cleaning and then put them back with the overflow pipe in their positions.

## READING THE TEMPERATURE

8. Pressing the  "S10" button it is possible to view in sequence the measured and programmed temperatures of the **tank (t1)** and of the **boiler (t2)** for the selected cycle.

1. Pressing  " S10" once the display shows the code "*t.1. .*";
2. pressing  " S10" a second time shows the measured tank temperature "*x.x. .*";
3. pressing  " S10" a third time shows the programmed tank temperature "*x.x.P.*";

- 
4. Pressing  " S10" a fourth time shows on the display the code "*t.2. .*";
  5. pressing  " S10" a fifth time shows the measured boiler temperature "*.x.x.*";
  6. pressing  " S10" a sixth time shows the programmed boiler temp. "*P.x.x.*";
  7. pressing  " S10" again returns to the starting state.

**⚠ The operations described above can not be performed during a cycle.**



## **DEACTIVATING THE DISHWASHER AT THE END OF THE DAY**

**9.**At the end of service, turn off by using the main wall switch and close the water valve.

## **WARNINGS WHILE WASHING**

- 1) Check that the washing temperature stays at 55°C
- 2) Do not use bare hands when handling soapy water. If this occurs rinse immediately and thoroughly under fresh running water.
- 3) While the machine is operating, do not turn any knobs too quickly.
- 4) Use only chlorified anti-suds detergent specifically for industrial use.
- 5) Turn off machine in case of breakdown or malfunction.. For repair, contact only authorized technical assistance outlets using only genuine parts.
- 6) Under no circumstances should the settings of the thermostats be altered.
- 7) When running continuous cycles throughout the day, change the washing tank water 2 or more times.
- 8) Do not subject washed dishes to any other handling such as rotary brushes, vapors, dish-cloth drying etc.

Mishandling of any of the above may compromise the safety of the appliance.

## USEFUL ADVICE

1) **MAINTANANCE:** Before beginning any cleaning or maintainance operation, the machine **MUST** be disconnected from the main power supply.

Frequently check and clean the blades, taking them out from the column to remove any debris or crustation.

The frequency of this operation is suggested by the quantity of residue or by non-satisfactory results from washing.

For internal and external cleaning of the machine, do not use corrosive products such as sodium hypochlorite (bleach) or hydrochloric acid (muriatic acid), steel wool or steel brushes.

So as not to interfere with the correct functioning of the machine, in the presence of calcium salts or magnesium in the water you are advised to periodically de-encrust and keep in good order by using personnel professionally qualified.

So as to avoid risk of damage from oxidization or corrosion from chemicals, keep all steel surfaces well clean.

2) **FOR BEST RESULTS:** An insufficient wash cycle may occur which is visible when traces of waste remain. Streaking may be caused when the rinse cycle is insufficient, in which case check that the rinse nozzles are clean and that the water source is of suitable pressure.

In case of waste remains check that:

-the wash cycle nozzles are clean.

-the wash cycle temperature is at 55°C.

-the detergent is chlorified, of the correct concentration and specifically for industrial use.

-the suction pump filter is clean

-the dishes are in the correct rack

-the dishes are placed correctly in the rack

### 3) **PROLONGED DISUSE**

In case of prolonged disuse, a few weeks, it is advisable to run the machine empty a few times with clean water so as to avoid the build up of any odors. If necessary repeat this operation a few times until the the water at the end of the wash is good and clean.

If the period of disuse is longer, it is advisable to oil stainless steel surfaces with vaseline and to remove any water from the boiler and the electric pump. It is always advisable to run the sanitizing and de-encrustation operations both before and after periods of disuse.

#### 4) SANITIZING

It is vital to thoroughly clean the machine at least once a week. It is advisable to use specifically a detergent which disinfects, the use of which will substantially increase the following advantages:

- Establishes a secure hygienic state by using active detergents and disinfectants.
- maintains the machine in perfect hygienic conditions even during periods of non-use.

At the end of the operation, it is necessary to run the machine empty, so as to rinse it, for a few minutes.

#### 5) DISENCRUSTATION

In the presence of the use of hard water, lime deposits may formulate internally and on the dishes, which for hygienic reasons and for good care of the machine must be removed by disenocrustation.

The frequency of such procedure is according to the detergent manufacturers advice, those products which generally contain a phosphoric acid base.

So as not to damage the machine, do not exceed doses and when the operation is complete, rinse thoroughly.

#### 6) LOADING AND UNLOADING OF THE MACHINE

For the transportation of the machine from the delivery point to the final installation position, use a fork lift or adequate lifting equipment used by authorised staff. Lift the machine by its frame, taking care that any protruding parts are not damaged (discharges, wiring etc.).



#### 7) MACHINE DISMANTLING

At the end of its normal lifetime, the machine has to be taken apart according to the local regulations in force by separating the components as follows:

- ◆ metal parts: hood, platforms, frames, filters
- ◆ electrical parts: motors, remote control switches, microswitches, wiring
- ◆ plastic parts: racks, connections
- ◆ rubber parts: tubes, sleeves

#### 8) RESINS REGENERATION OF THE WATER SOFTENER (only for machines with built-in water softener)

The flashing of the "**C. .3.**" (30 sec.) on the display indicates the need to regenerate the resins. First of all, make sure that in the designated tank container there is some coarse salt.

This operation has to be carried out with **full tank**.

**Close the hood** and push the  "**S9**" button for approx. 5 sec.

The display show "**C. .3.**" (for 21' and 20"). During this operation the machine cannot be used.

At the end of the regeneration cycle, first start the self cleaning cycle (see page 6).